

BEFORE OPERATION

1. CONTENTS

This Parts catalog contains service parts for KBR103, but excludes service parts for engine, for which Parts Manual for 4HK1 model engine (Isuzu) shall be used as below.

ENGINE TYPE 4HK1.

2. HOW TO USE PARTS CATALOG

1) EDITING ORDER

This PARTS CATALOG is edited to follow the order of BASIC PARTS, and then GROUP PARTS for almost each COMPONENTS basis.
FIGURES are inserted on first page of each SECTIONS.
Edited page of each BASIC PARTS NO. can be confirmed by INDEX.

2) INDEX

(EXAMPLE)

| | | |
|-----|------------------------------------|-------|
| 1 | ENGINE CONCERNED | |
| 1-1 | ENGINE CONCERNED | 1-1-1 |
| 1-2 | INTAKE AND EXHAUST CONCERNED | 1-2-1 |

Showing SECTION NAME

Showing FIGURE NO. of BASIC AND GROUP NAMES

Showing Each COMPONENT NAME

Showing FIGURE NO. & PAGE

4)HOW TO LOOK AT LIST

Example :

| 1-1 ENGINE CONCERNED | | | Serial No. | 1-1-2 | |
|----------------------|----------------|-----------------------|------------|-------|---------|
| | | | 002~ | | |
| Illust No. | Part No. | Part Name | QTY | CONV | Remarks |
| 1~(42) | 010-0250-000 | Engine concerned Assy | 1 | | 002~010 |
| 1~(43) | 010-0250-100 | Engine concerned Assy | 1 | B | 011~ |
| 1 | 013-1090-100 | Flmage | 1 | | |
| 2 | 013-1440-000 | Mount engine (front) | 2 | | |
| 3 | 014-0990-001 | Key | 1 | | |
| 4 | 014-1002-001 | Stay, radiator | 2 | | |
| 5 | 014-1240-000 | Plate, breather | 1 | | |
| (1) | 00-OES-1496 | Engine Assy | 1 | | |
| (2) | 00-OEA-5882 | Accessory, engine | 1 | | |
| (3) | 00-11246-00Z11 | Bracket | 2 | | |
| (4) | 00-11243-00812 | * | 1 | | |
| (5) | 00-21399-96071 | Radiator | 1 | | |
| (6) | 00-21505-96016 | Hose, rower part | 1 | | |

- ① FIGURE NO.Please refer to above ① in item 3)
- ② SECTION NAME.....Please refer to above ② in item 3)
- ③ APPLIED SERIAL NO.··Showing vehicle SERIAL NO. applied with these basic parts and group parts assembly.
- ④ LIST PAGE.....Showing PAGE of the List.
- ⑤ ILLUSTRATION NO.···Please refer to above ④ in item 3)
- ⑥ PARTS NO.....Showing Nichijo's PARTS NO.
- ⑦ PARTS NAME.....Showing PARTS NAME, PARTS FEATURE and SUPPLMENTAL EXPLANATION.

INDEX

1 ENGINE CONCERNED

| | | |
|------|--|--------|
| 1-1 | ENGINE CONCERNED | 1-1-1 |
| 1-1 | ENGINE CONCERNED | 1-1-4 |
| 1-1 | ENGINE CONCERNED | 1-1-7 |
| 1-1 | ENGINE CONCERNED | 1-1-10 |
| 1-2 | INTAKE AND EXHAUST CONCERNED | 1-2-1 |
| 1-2 | INTAKE AND EXHAUST CONCERNED | 1-2-4 |
| 1-3 | FUEL CONCERNED | 1-3-1 |
| 1-4 | ACCELERATOR CONTROL | 1-4-1 |
| 1-5 | PANEL GAUGE PIPING | 1-5-1 |
| 1-5 | PANEL GAUGE PIPING | 1-5-4 |
| 1-6 | AIR CLEANER | 1-6-1 |
| 1-7 | RADIATOR | 1-7-1 |
| 1-8 | INTAKE AND EXHAUST CONCERNED(COLD WEATHER MODEL) | 1-8-1 |
| 1-8 | INTAKE AND EXHAUST CONCERNED(COLD WEATHER MODEL) | 1-8-3 |
| 1-9 | CLUTCH | 1-9-1 |
| 1-10 | ALTERNATOR(80A MODEL) | 1-10-1 |

2 TRANSMISSION CONCERNED

| | | |
|-----|---|-------|
| 2-1 | TRANSMISSION HYDRAULIC PIPING(INCLUDE AUGER REVERSE MODEL) | 2-1-1 |
| 2-2 | TRANSMISSION CASING & HYDRAULIC PIPING(STANDARD MODEL) | 2-2-1 |
| 2-3 | TRANSMISSION CASING & HYDRAULIC PIPING(AUGER REVERSE MODEL) | 2-3-1 |
| 2-4 | POWER DISTRIBUTION GEAR(STANDARD MODEL) | 2-4-1 |
| 2-5 | POWER DISTRIBUTION GEAR(AUGER REVERSE MODEL) | 2-5-1 |
| 2-6 | TRAVELING SPEED TRANSMISSION GEAR | 2-6-1 |

3 ACCELERATOR CONCERNED

| | | |
|-----|----------------------------|-------|
| 3-1 | POWER HYDRAULIC OIL PIPING | 3-1-1 |
|-----|----------------------------|-------|

| | | |
|-----|-------------------------------|--------|
| 3-1 | POWER HYDRAULIC OIL PIPING | 3-1-6 |
| 3-1 | POWER HYDRAULIC OIL PIPING | 3-1-10 |
| 3-2 | TRAVELING POWER AND APPARATUS | 3-2-1 |
| 3-3 | PROPELLER SHAFT | 3-3-1 |
| 3-4 | PROPELLER SHAFT | 3-4-1 |
| 3-5 | TANDEM | 3-5-1 |
| 3-6 | REAR AXLE | 3-6-1 |
| 3-7 | SUSPENSION | 3-7-1 |
| 3-8 | LEAF SPRING | 3-8-1 |

4 BRAKE SYSTEM

| | | |
|-----|--------------------|-------|
| 4-1 | FOOT BRAKE PIPING | 4-1-1 |
| 4-1 | FOOT BRAKE PIPING | 4-1-5 |
| 4-1 | FOOT BRAKE PIPING | 4-1-9 |
| 4-2 | HYDRO SERVO MASTER | 4-2-1 |
| 4-3 | BRAKE | 4-3-1 |
| 4-4 | HAND BRAKE | 4-4-1 |
| 4-5 | BRAKE HEAD | 4-5-1 |

5 DRIVING SYSTEM

| | | |
|-----|-------------------|-------|
| 5-1 | DRIVING SYSTEM | 5-1-1 |
| 5-1 | DRIVING SYSTEM | 5-1-4 |
| 5-2 | STEERING CYLINDER | 5-2-1 |
| 5-2 | STEERING CYLINDER | 5-2-1 |

6 CONTROL SYSTEM

| | | |
|-----|--------------------------------|-------|
| 6-1 | FORWARD/BACKWARD CONTROL | 6-1-1 |
| 6-2 | OPERATING CONTROL(AUGER BRAKE) | 6-2-1 |
| 6-2 | OPERATING CONTROL(AUGER BRAKE) | 6-2-3 |
| 6-3 | OPERATING HYDRAULIC CONTROL | 6-3-1 |

| | | |
|-----|--|-------|
| 6-4 | DISK CALIPER | 6-4-1 |
| 6-5 | FORWARD/BACKWARD CONTROL(LEVER/PEDAL SWITCHING MODEL) | 6-5-1 |
| 6-6 | OPERATING HYDRAULIC CONTROL(MECHANICAL JOYSTICK MODEL) | 6-6-1 |
| 6-7 | OPERATING HYDRAULIC CONTROL(ANGLING BLADE) | 6-7-1 |
| 6-8 | OPERATING HYDRAULIC CONTROL(MULTI BLADE) | 6-8-1 |

7 TRANSMISSION SYSTEM

| | | |
|------|---|--------|
| 7-1 | OPERATING POWER | 7-1-1 |
| 7-2 | TRANSMISSION(ONE-TOUCH MODEL) | 7-2-1 |
| 7-3 | TRANSMISSION | 7-3-1 |
| 7-4 | PROPELLER SHAFT NO. 1 | 7-4-1 |
| 7-5 | PROPELLER SHAFT NO. 2 | 7-5-1 |
| 7-6 | PROPELLER SHAFT RECEIVING DEVICE | 7-6-1 |
| 7-7 | SHEAR-PIN-LESS CLUTCH | 7-7-1 |
| 7-8 | OPERATING POWER(1.3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 7-8-1 |
| 7-9 | PROPELLER SHAFT NO. 2(1.3mWIDTH MODEL) | 7-9-1 |
| 7-10 | OPERATING POWER(1.5mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 7-10-1 |
| 7-11 | TRANSMISSION MOUNTING DEVICE | 7-11-1 |
| 7-11 | TRANSMISSION MOUNTING DEVICE | 7-11-3 |
| 7-12 | OPERATING POWER(1.3mWIDTH MODEL) | 7-12-1 |

8 OPERATING HYDRAULIC PIPING CONCERNED

| | | |
|-----|--|-------|
| 8-1 | OPERATING HYDRAULIC PIPING(VEHICLE BODY) | 8-1-1 |
| 8-1 | OPERATING HYDRAULIC PIPING(VEHICLE BODY) | 8-1-5 |
| 8-2 | OPERATING HYDRAULIC PIPING(ROTARY HEAD) | 8-2-1 |
| 8-2 | OPERATING HYDRAULIC PIPING(ROTARY HEAD) | 8-2-4 |
| 8-3 | OPERATING HYDRAULIC PIPING(CHUTE) | 8-3-1 |
| 8-3 | OPERATING HYDRAULIC PIPING(CHUTE) | 8-3-3 |
| 8-3 | OPERATING HYDRAULIC PIPING(CHUTE) | 8-3-5 |

| | | |
|------|---|--------|
| 8-4 | CONTROL VALVE | 8-4-1 |
| 8-5 | LIFTING CYLINDER | 8-5-1 |
| 8-5 | LIFTING CYLINDER | 8-5-3 |
| 8-6 | TIPPING BACK CYLINDER | 8-6-1 |
| 8-6 | TIPPING BACK CYLINDER | 8-6-3 |
| 8-7 | TILTING CYLINDER | 8-7-1 |
| 8-7 | TILTING CYLINDER | 8-7-3 |
| 8-8 | BLOWER CASE REVOLVING CYLINDER | 8-8-1 |
| 8-8 | BLOWER CASE REVOLVING CYLINDER | 8-8-3 |
| 8-9 | FOLDING CYLINDER | 8-9-1 |
| 8-9 | FOLDING CYLINDER | 8-9-3 |
| 8-10 | EXPANDING CYLINDER | 8-10-1 |
| 8-10 | EXPANDING CYLINDER | 8-10-3 |
| 8-11 | OPERATING HYDRAULIC PIPING(ANGLING BLADE) | 8-11-1 |
| 8-12 | ANGLING CYLINDER | 8-12-1 |
| 8-13 | OPERATING HYDRAULIC PIPING(AUGER GUARD) | 8-13-1 |
| 8-13 | OPERATING HYDRAULIC PIPING(AUGER GUARD) | 8-13-4 |
| 8-14 | FOLDING CYLINDER(AUGER GURAD) | 8-14-1 |
| 8-15 | OPERATING HYDRAULIC PIPING(VEHICLE BODY, AUGER GUARD) | 8-15-1 |
| 8-15 | OPERATING HYDRAULIC PIPING(VEHICLE BODY, AUGER GUARD) | 8-15-4 |
| 8-16 | OPERATING HYDRAULIC PIPING(ROTARY HEAD) (1. 3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE, ONE-TOUCH MODEL) | 8-16-1 |
| 8-16 | OPERATING HYDRAULIC PIPING(ROTARY HEAD) (1. 3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE, ONE-TOUCH MODEL) | 8-16-4 |
| 8-17 | OPERATING HYDRAULIC PIPING (VEHICLE BODY, MECHANICAL JOY-STICK MODEL) | 8-17-1 |
| 8-17 | OPERATING HYDRAULIC PIPING (VEHICLE BODY, MECHANICAL JOY-STICK MODEL) | 8-17-5 |
| 8-17 | OPERATING HYDRAULIC PIPING (VEHICLE BODY, MECHANICAL JOY-STICK MODEL) | 8-17-9 |
| 8-18 | OPERATING HYDRAULIC PIPING (ROTARY HEAD, MECHANICAL JOY-STICK MODEL) | 8-18-1 |
| 8-19 | CAP CYLINDER | 8-19-1 |
| 8-20 | OPERATING HYDRAULIC PIPING(ROTARY HEAD) (1. 3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 8-20-1 |

| | | |
|------|---|--------|
| 8-21 | EXPANDING CYLINDER(CHUTE EXTENSION MODEL) | 8-21-1 |
| 8-22 | OPERATING HYDRAULIC PIPING(ROTARY HEAD) | 8-22-1 |

9 CHASSIS CONCERNED

| | | |
|------|---|--------|
| 9-1 | VEHICLE FRAME | 9-1-1 |
| 9-1 | VEHICLE FRAME | 9-1-4 |
| 9-2 | DRIVING CABIN | 9-2-1 |
| 9-2 | DRIVING CABIN | 9-2-6 |
| 9-2 | DRIVING CABIN | 9-2-10 |
| 9-2 | DRIVING CABIN | 9-2-14 |
| 9-3 | ENGINE ROOM | 9-3-1 |
| 9-3 | ENGINE ROOM | 9-3-4 |
| 9-3 | ENGINE ROOM | 9-3-7 |
| 9-4 | TILTING APPARATUS | 9-4-1 |
| 9-5 | DOOR WINDOW | 9-5-1 |
| 9-6 | LIFTING APPARATUS(ONE-TOUCH) | 9-6-1 |
| 9-7 | FENDER(1.5mWIDTH) | 9-7-1 |
| 9-8 | RETENTION WIRE | 9-8-1 |
| 9-9 | LIFTING APPARATUS | 9-9-1 |
| 9-10 | FENDER(1.3mWIDTH) | 9-10-1 |
| 9-11 | LIFTING APPARATUS(MOWING EQUIPMENT, LIFTING LOCK MODEL) | 9-11-1 |
| 9-12 | COUNTER WEIGHT | 9-12-1 |

10 SNOW REMOVAL ROTARY HEAD

| | | |
|------|------------------------|--------|
| 10-1 | ROTARY HEAD | 10-1-1 |
| 10-2 | BLOWER AND BLOWER CASE | 10-2-1 |
| 10-2 | BLOWER AND BLOWER CASE | 10-2-3 |
| 10-3 | AUGER | 10-3-1 |
| 10-4 | SKID | 10-4-1 |
| 10-5 | CHUTE MS MODEL | 10-5-1 |

| | | |
|-------|--|---------|
| 10-5 | CHUTE MS MODEL | 10-5-6 |
| 10-6 | ANGLING BLADE | 10-6-1 |
| 10-6 | ANGLING BLADE | 10-6-4 |
| 10-7 | ROTARY HEAD(AUGER GUARD) | 10-7-1 |
| 10-8 | AUGER GUARD | 10-8-1 |
| 10-9 | ROTARY HEAD (1. 3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE, COMB-TOOTH EDGE) | 10-9-1 |
| 10-10 | AUGER(1. 3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE, CUTTING RING ENHANCEMENT) | 10-10-1 |
| 10-11 | BLOWER AND BLOWER CASE(1. 3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE, CUTTING RING ENHANCEMENT) | 10-11-1 |
| 10-11 | BLOWER AND BLOWER CASE(1. 3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE, CUTTING RING ENHANCEMENT) | 10-11-3 |
| 10-12 | ROTARY HEAD(SIDE EDGE MODEL) | 10-12-1 |
| 10-13 | ROTARY HEAD(WORKING LIGHT MODEL) | 10-13-1 |
| 10-14 | ROTARY HEAD (1. 3mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 10-14-1 |
| 10-15 | BLOWER AND BLOWER CASE (1. 5mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 10-15-1 |
| 10-15 | BLOWER AND BLOWER CASE (1. 5mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 10-15-3 |
| 10-16 | AUGER(1. 5mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 10-16-1 |
| 10-17 | ROTARY HEAD(1. 3mWIDTH) | 10-17-1 |
| 10-18 | BLOWER AND BLOWER CASE(1. 3mWIDTH) | 10-18-1 |
| 10-19 | AUGER(1. 3mWIDTH) | 10-19-1 |
| 10-20 | ROTARY HEAD(HYDRAULIC SNOW CUTTER) | 10-20-1 |
| 10-21 | ROTARY HEAD(SNOW SPILL PREVENTION MODEL) | 10-21-1 |
| 10-22 | HYDRAULIC SNOW CUTTER | 10-22-1 |

11 ELECTRICAL FITTINGS CONCERNED

| | | |
|------|---|--------|
| 11-1 | ELECTRICAL FITTINGS(FRONT) | 11-1-1 |
| 11-1 | ELECTRICAL FITTINGS(FRONT) | 11-1-7 |
| 11-2 | ELECTRICAL FITTINGS(REAR) | 11-2-1 |
| 11-2 | ELECTRICAL FITTINGS(REAR) | 11-2-4 |
| 11-3 | ELECTRICAL FITTINGS(YELLOW FLASHING LIGHT) | 11-3-1 |
| 11-4 | ELECTRICAL FITTINGS(ROTARY HEAD OPERATING LAMP) | 11-4-1 |

| | | |
|-------|--|---------|
| 11-4 | ELECTRICAL FITTINGS(ROTARY HEAD OPERATING LAMP) | 11-4-3 |
| 11-5 | ELECTRICAL FITTINGS(HYBRID-TYPE DIFFUSED MARS LIGHT) | 11-5-1 |
| 11-6 | ELECTRICAL FITTINGS(TWO OPERATING LAMP MODEL) | 11-6-1 |
| 11-6 | ELECTRICAL FITTINGS(TWO OPERATING LAMP MODEL) | 11-6-3 |
| 11-7 | ELECTRICAL FITTINGS(CHUTE OPERATING LAMP) | 11-7-1 |
| 11-7 | ELECTRICAL FITTINGS(CHUTE OPERATING LAMP) | 11-7-3 |
| 11-8 | ELECTRICAL FITTINGS(REAR OPERATING LAMP) | 11-8-1 |
| 11-8 | ELECTRICAL FITTINGS(REAR OPERATING LAMP) | 11-8-3 |
| 11-8 | ELECTRICAL FITTINGS(REAR OPERATING LAMP) | 11-8-5 |
| 11-9 | ELECTRICAL FITTINGS(OPERATING LAMP SWITCH) | 11-9-1 |
| 11-10 | ELECTRICAL FITTINGS(HEAT WIRE GLASS) | 11-10-1 |
| 11-10 | ELECTRICAL FITTINGS(HEAT WIRE GLASS) | 11-10-3 |
| 11-11 | ELECTRICAL FITTINGS(AUGER GUARD) | 11-11-1 |
| 11-12 | ELECTRICAL FITTINGS(MECHANICAL JOY-STICK) | 11-12-1 |
| 11-12 | ELECTRICAL FITTINGS(MECHANICAL JOY-STICK) | 11-12-3 |
| 11-13 | ELECTRICAL FITTINGS(HYDRAULIC SHEAR-PIN-LESS DEVICE) | 11-13-1 |
| 11-13 | ELECTRICAL FITTINGS(HYDRAULIC SHEAR-PIN-LESS DEVICE) | 11-13-3 |
| 11-13 | ELECTRICAL FITTINGS(HYDRAULIC SHEAR-PIN-LESS DEVICE) | 11-13-5 |
| 11-14 | ELECTRICAL FITTINGS(LEVER/PEDAL SWITCHING MODEL) | 11-14-1 |
| 11-15 | ELECTRICAL FITTINGS(HEAT WIRE MIRROR) | 11-15-1 |
| 11-16 | ELECTRICAL FITTINGS(MICROWAVE SAFE WORK ASSIST DEVICE) | 11-16-1 |
| 11-16 | ELECTRICAL FITTINGS(MICROWAVE SAFE WORK ASSIST DEVICE) | 11-16-3 |
| 11-17 | ELECTRICAL FITTINGS(AM/FM, AM TUNER) | 11-17-1 |
| 11-17 | ELECTRICAL FITTINGS(AM/FM, AM TUNER) | 11-17-3 |
| 11-18 | ELECTRICAL FITTINGS(STEP LAMP) | 11-18-1 |
| 11-19 | ELECTRICAL FITTINGS(REAR LABELING EQUIPMENT) | 11-19-1 |
| 11-19 | ELECTRICAL FITTINGS(REAR LABELING EQUIPMENT) | 11-19-3 |
| 11-20 | ELECTRICAL FITTINGS(DIFFUSED MARS LIGHT JPS55CY MODEL) | 11-20-1 |

| | |
|---|---------|
| 11-21 ELECTRICAL FITTINGS(DIFFUSED MARS LIGHT FLP98CY MODEL) | 11-21-1 |
| 11-22 ELECTRICAL FITTINGS(DIFFUSED MARS LIGHT FLP113CY MODEL) | 11-22-1 |
| 11-23 ELECTRICAL FITTINGS(REAR HEAT WIRE GLASS) | 11-23-1 |
| 11-23 ELECTRICAL FITTINGS(REAR HEAT WIRE GLASS) | 11-23-3 |
| 11-24 ELECTRICAL FITTINGS(LOUDSPEAKER SYSTEM) | 11-24-1 |
| 11-24 ELECTRICAL FITTINGS(LOUDSPEAKER SYSTEM) | 11-24-3 |
| 11-25 ELECTRICAL FITTINGS(AUGER REVERSE MODEL) | 11-25-1 |
| 11-26 ELECTRICAL FITTINGS(AM/FM CASSETTE WITH RADIO) | 11-26-1 |
| 11-26 ELECTRICAL FITTINGS(AM/FM CASSETTE WITH RADIO) | 11-26-3 |
| 11-27 ELECTRICAL FITTINGS(1.5mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 11-27-1 |
| 11-27 ELECTRICAL FITTINGS(1.5mWIDTH, HYDRAULIC SHEAR-PIN-LESS DEVICE) | 11-27-3 |
| 11-28 ELECTRICAL FITTINGS(THERMOSTAT WITH FRONT HEAT GLASS) | 11-28-1 |
| 11-29 ELECTRICAL FITTINGS(INTERMITTENT WIPER) | 11-29-1 |
| 11-30 ELECTRICAL FITTINGS(ONE-PASS MOWING EQUIPMENT) | 11-30-1 |
| 11-31 ELECTRICAL FITTINGS(HYDRAULIC SNOW CUTTER) | 11-31-1 |
| 11-32 ELECTRICAL FITTINGS(CIGARETTE LIGHTER SOCKET) | 11-32-1 |
| 11-33 ELECTRICAL FITTINGS(REAR OPERATING LAMP) | 11-33-1 |
| 11-34 ELECTRICAL FITTINGS(BATTERY SWITCH) | 11-34-1 |

12 OTHER EQUIPMENT

| | |
|---------------------------|--------|
| 12-1 FRONT WIPER | 12-1-1 |
| 12-2 REAR WIPER | 12-2-1 |
| 12-3 CAR HEATER/DEFROSTER | 12-3-1 |
| 12-3 CAR HEATER/DEFROSTER | 12-3-4 |
| 12-4 CAR HEATER | 12-4-1 |
| 12-5 NAME PLATE(1) | 12-5-1 |
| 12-5 NAME PLATE(1) | 12-5-4 |
| 12-5 NAME PLATE(1) | 12-5-7 |
| 12-6 NAME PLATE(2) | 12-6-1 |

| | | |
|-------|---------------------------------------|---------|
| 12-6 | NAME PLATE(2) | 12-6-3 |
| 12-7 | AIR CONDITIONER | 12-7-1 |
| 12-7 | AIR CONDITIONER | 12-7-6 |
| 12-7 | AIR CONDITIONER | 12-7-12 |
| 12-7 | AIR CONDITIONER | 12-7-18 |
| 12-8 | ACCESSORIES | 12-8-1 |
| 12-9 | NAME PLATE(REPLACEMENT DEVICE) | 12-9-1 |
| 12-10 | NAME PLATE(ONE-PASS MOWING EQUIPMENT) | 12-10-1 |
| 12-11 | MOWING EQUIPMENT(ONE-PASS) | 12-11-1 |
| 12-12 | MOWING EQUIPMENT(NK140B) | 12-12-1 |
| 12-12 | MOWING EQUIPMENT(NK140B) | 12-12-3 |
| 12-13 | ACCESSORIES(TOOL BOX) | 12-13-1 |
| 12-14 | NAME PLATE(1)(ENGLISH NOTATION) | 12-14-1 |
| 12-15 | NAME PLATE(2)(ENGLISH NOTATION) | 12-15-1 |